



Wireless FM Transmitter Instructions



- Connect the 12v power connector to the FM Wireless Transmitter, and plug the charger end into the cigarette lighter of your car.
- Connect the plug on the FM Wireless Transmitter into the earphone jack located on the side of the Playaway (can also plug into the Sansa SanDisk or Creative Zen V series MP3 players).
- Using the black button on the FM Wireless Transmitter, select an FM station, from 107.1 to 107.9. Tune the car stereo to the same station.
- Press the Play button on the Playaway device to turn it on. Press Play again to start playing. On MP3 players, turn on the power, then browse through the Menu to find the book you wish to play.
- The recording transmits wirelessly to your car stereo.
- To adjust volume, first use the Volume Adjust button on the Playaway. If additional volume is required, use volume control on the car stereo.

IMPORTANT NOTE: Before unplugging wireless FM transmitter, be sure to turn car radio volume DOWN!

Questions?

Call 516-759-8300 or come in and speak to a librarian

Gold Coast Public Library
50 Railroad Ave.
Glen Head, NY 11545
516-759-8300
www.goldcoastlibrary.org